



Outdoor Recreation
MCAS Beaufort • Bldg 1219 • Open Mon-Sat 0800-1700



Bounce House Information Sheet

General Information

Please read this sheet before setting up your bounce house. Inflatables are very heavy. You will require at least 2 people to load and unload the unit, which can weigh between 200-700 lbs.

Your understanding and compliance with these matters are greatly appreciated!

Capacity

Please see that only compatible age groups play in the bounce house unit at the same time. The maximum number permitted inside the bounce house at one time is as follows:

Unit Size 13 x 13'

Children ages 8 or under:	5 to 8 children
Children ages 8 to 12:	4 to 6 children
Teenagers:	3 to 4 people
Adults:	Maximum of 3

Unit Size 15 x 15'

Children ages 8 or under:	7 to 9 children
Children ages 8 to 12:	5 to 7 children
Teenagers:	4 to 6 people
Adults:	Maximum of 5

Not Permitted in the Bounce House

**No Shoes • No Flip-Flops • No Gum • No Food • No Drink
No Candy • No Pets • No Hairpins • Silly Putty / Silly String**

Cleaning

If any sticky residue is found on equipment when you have returned it, you will be charged a cleaning fee of \$50. Please note: Silly String cannot be used anywhere near the bounce house because it will chemically bond-- like glue-- to the vinyl inflatable. Removal of such could cost you hundred of dollars.

Returning

Please return your bounce house promptly at noon (1200).

Other Cautions

Inflatables must not get wet. If the unit is to be used in an area with automatic sprinklers, make certain the system has been shut off at least one full day prior to the day of your event. The set-up area must be DRY. Wait until morning dew has evaporated before setting up, and be sure to take unit down before evening dew can settle on the bounce house.

Bounce house may not be left outside overnight.

Do not set up near swimming pool. If severe weather is predicted or strong winds are blowing, it is strongly suggested you postpone or cancel set-up of the bounce house.

Please Be SAFE!

Inspect the set-up area before setting up the bounce house. Make sure there are no holes, sharp objects, uneven or sloping surfaces which could endanger those who use the inflatable. Allow at least 5ft. all the way around the outside of the set up bounce house. Keep people away from the back side where air tubes, blower and power cord will be.

Gusting wind or very strong continuous wind may cause the bounce house to overturn. Please watch weather carefully.

Please do not allow more than the maximum number of persons as seen at left.

Be sure to use a separate 110-volt grounded outlet on a 20-amp circuit with nothing else plugged into it. Use a heavy-duty power cord not longer than 50ft. Make sure the cord is routed to prevent tripping or unplugging.

In Case of Unit Deflating

If the motor has stopped, please check the cord. A maximum 100-ft. extension cord is suggested, using a heavy-duty power outlet (such as found in kitchen or garage).

If the motor continues to run, check the air intake on the side of the motor to make sure it is not blocked. Check both tubes at the back of the unit, making sure they are snugly fastened, and retie if necessary. If the unit is still deflating, please call Outdoor Recreation: 228-7472.